



Castor Kit


STEP 1

TURN CABINET UPSIDE DOWN



STEP 2

SLIDE ON SPACER AND INSERT
CASTOR INTO BASE

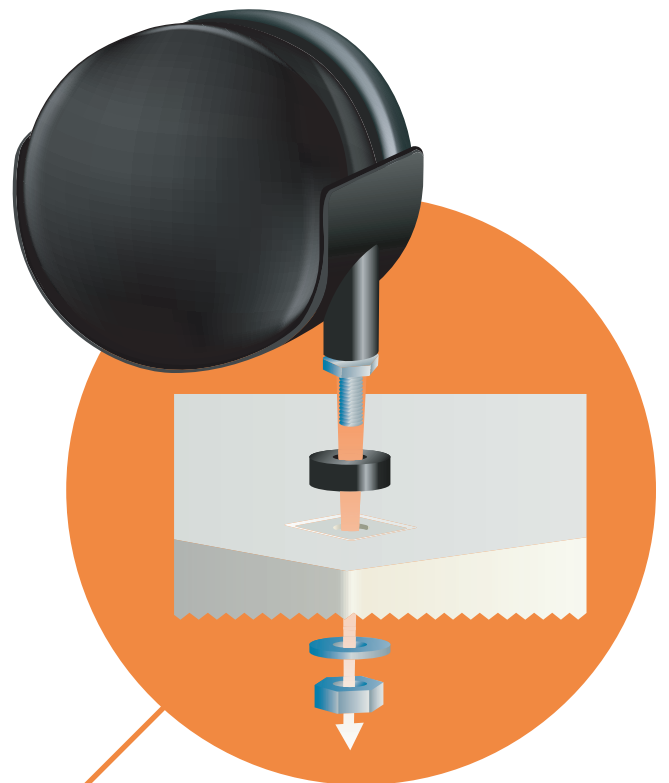

STEP 3

FIX WASHER AND NUT AND TIGHTEN

