


MFB PRODUCTS PTY LTD
 ABN 63 004 939 860

Door Assembly 1

STEP 1

FIT HINGES IN PLACE BY ALIGNING THEM AND PRESSING THE DELRIN HINGE PINS INTO PLACE UNTIL THEY CLICK

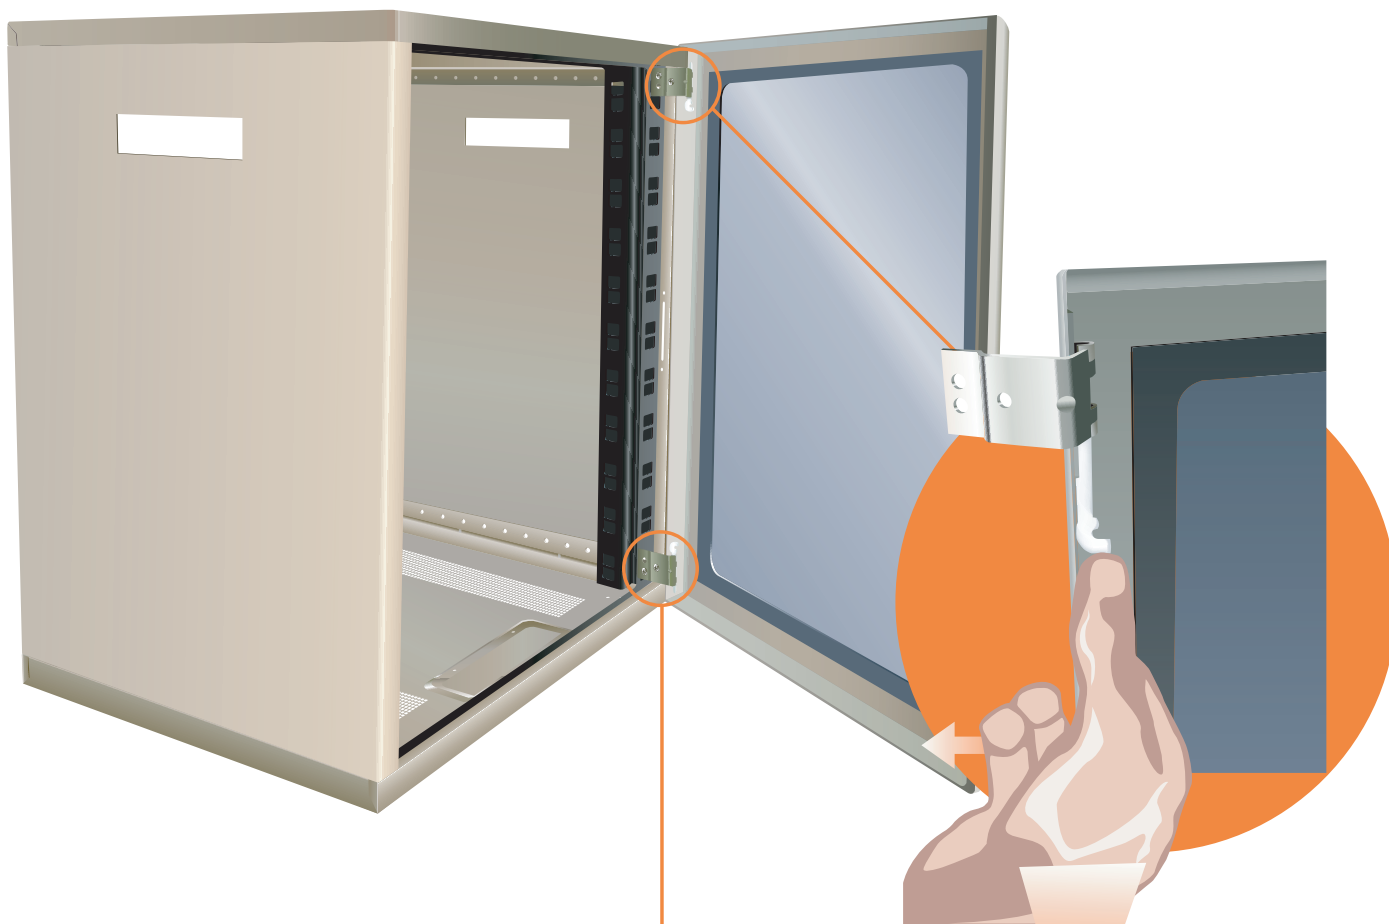

STEP 2

FIT DOOR TO CABINET WITH TWO SCREWS PER HINGE. DOORS MAY BE HUNG FOR LEFT OR RIGHT HAND HINGING.



Door Assembly 2


STEP 3

ATTACH CLEAR RUBBER DOOR STOPS IN THE CORNERS ABOVE AND BELOW THE LOCK.



STEP 4

INSERT LOCK THROUGH DOOR AND FIX WITH STAR WASHER AND NUT UNTIL FIRMLY IN POSITION

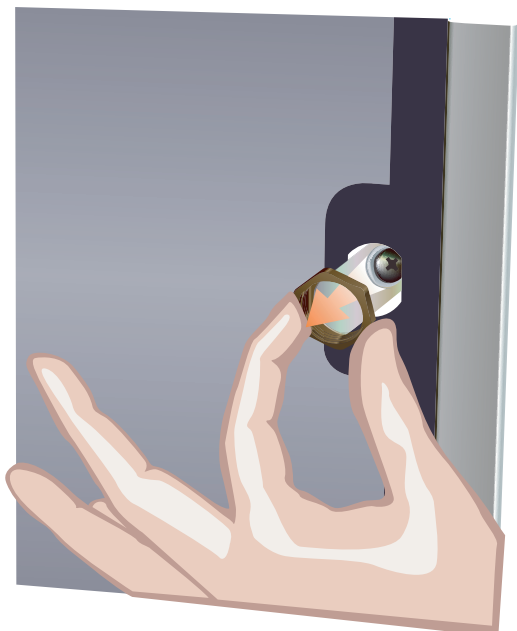

STEP 5

CHECK THAT FLAG IS IN LOCK POSITION WHEN KEY IS VERTICAL. TIGHTEN NUT.

