



105 LEWIS RD, WANTIRNA SOUTH
VICTORIA 3152 AUSTRALIA
TEL: +61 3 9801 1044 OR TEL: +61 2 9749 1922
FAX: +61 3 9801 1176 OR FAX: +61 3 9749 1987
E-MAIL: sales@mfb.com.au
<http://www.mfb.com.au>

NEED HELP?




TOOL LIST

MFB PRODUCTS PTY LTD
ABN 63 004 939 860

Series 210 Cabinet


STEP 1

LAY BASE FLAT AND
ATTACH SIDES VIA
FOUR SELF TAPPING
SCREWS. REPEAT FOR
THE OTHER SIDE.
ENSURE THAT THE
HANDLE TOP IS AT
THE TOP.

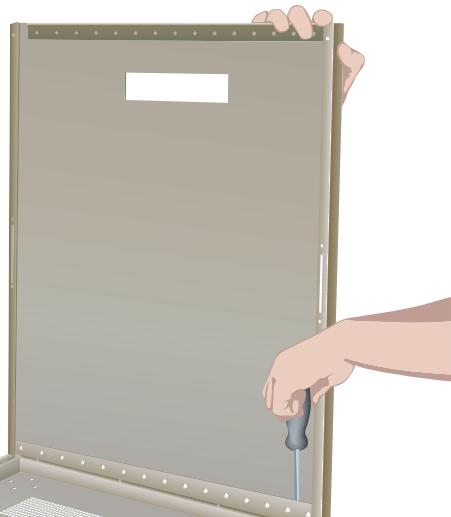

STEP 2

INSERT MOUNTING FRAMES,
ONE FRONT, ONE REAR,
WITH THE FLAT SURFACES
FACING OUTWARDS

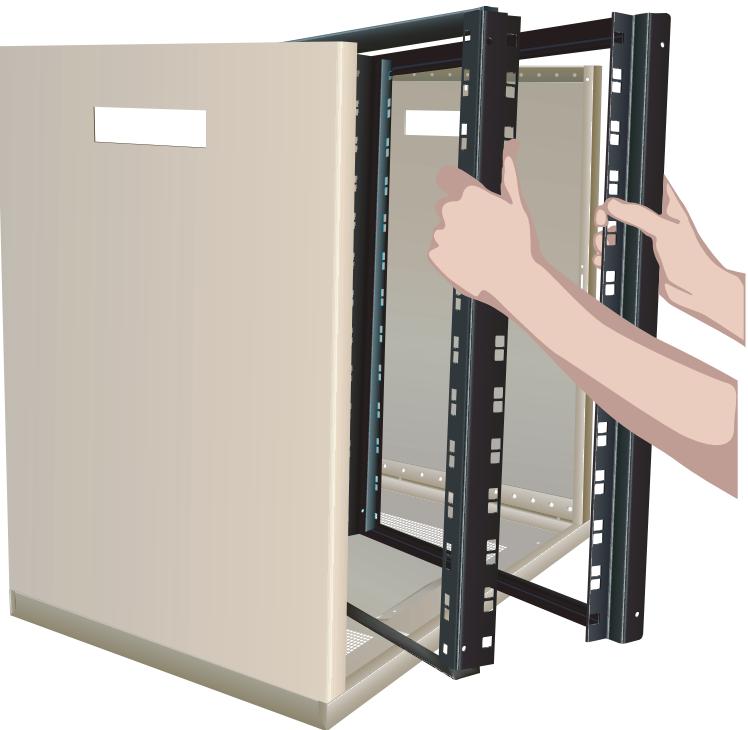

STEP 3

ATTACH MOUNTING FRAMES
TO SIDES - ONLY ON THE BOTTOM.
(If door, swing frame or wall mount
brackets are being fitted, front
mounting frame needs to be
mounted one hole back.)



105 LEWIS RD, WANTIRNA SOUTH
VICTORIA 3152 AUSTRALIA
TEL: +61 3 9801 1044 OR TEL: +61 2 9749 1922
FAX: +61 3 9801 1176 OR FAX: +61 3 9749 1987
E-MAIL: sales@mfb.com.au
<http://www.mfb.com.au>

NEED HELP!

MFB PRODUCTS PTY LTD
ABN 63 004 939 860

Series 210 Cabinet 2


STEP 4

ATTACH LID TO THE TOP OF THE SIDES



STEP 5

ATTACH TOP OF MOUNTING FRAME TO SIDES

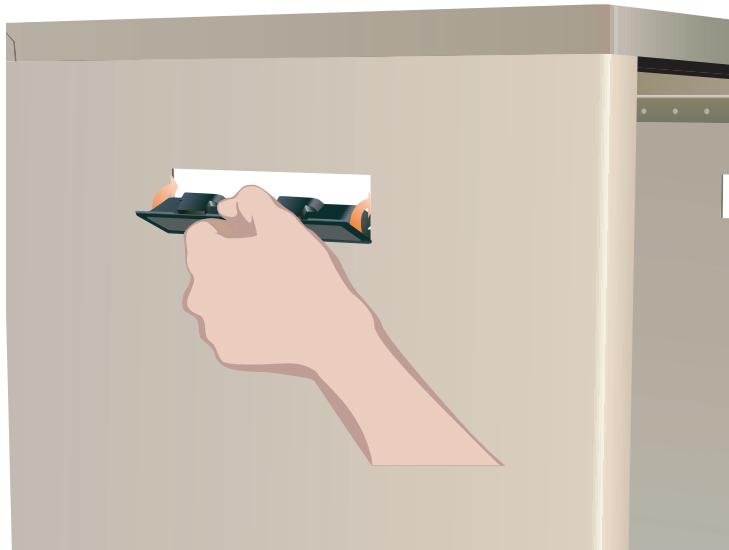

STEP 6

INSERT BOTTOM OF HANDLE INTO
HOLE AT TOP OF SIDES AND TILT TOP
UPWARDS UNTIL SIDES CLICK INTO
POSITION. REPEAT ON OTHER SIDE.



MFB PRODUCTS PTY LTD
ABN 63 004 939 860

Series 210 Cabinet Options


GLAND PLATE

ATTACH GLAND PLATE TO BASE



RUBBER FEET

INSERT FEET INTO RECESSES
IN BASE (NOT REQUIRED IF
CASTORS ARE BEING FIT)

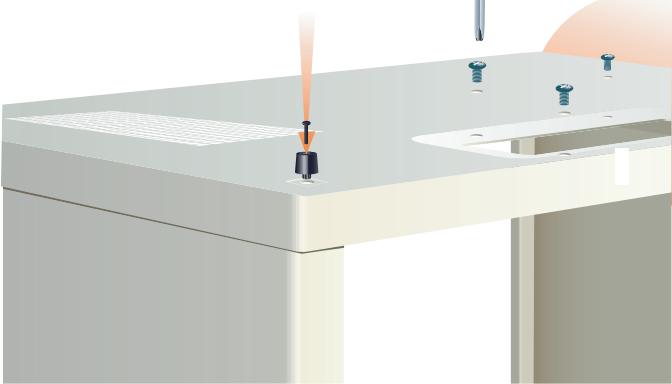


REAR PANEL

ATTACH REAR PANEL TO SIDES (IF REQUIRED)



WALL MOUNTS

ATTACH WALL MOUNTS TO REAR
OF CABINET (IF NO REAR PANEL IS
FITTED - AND IF REQUIRED)

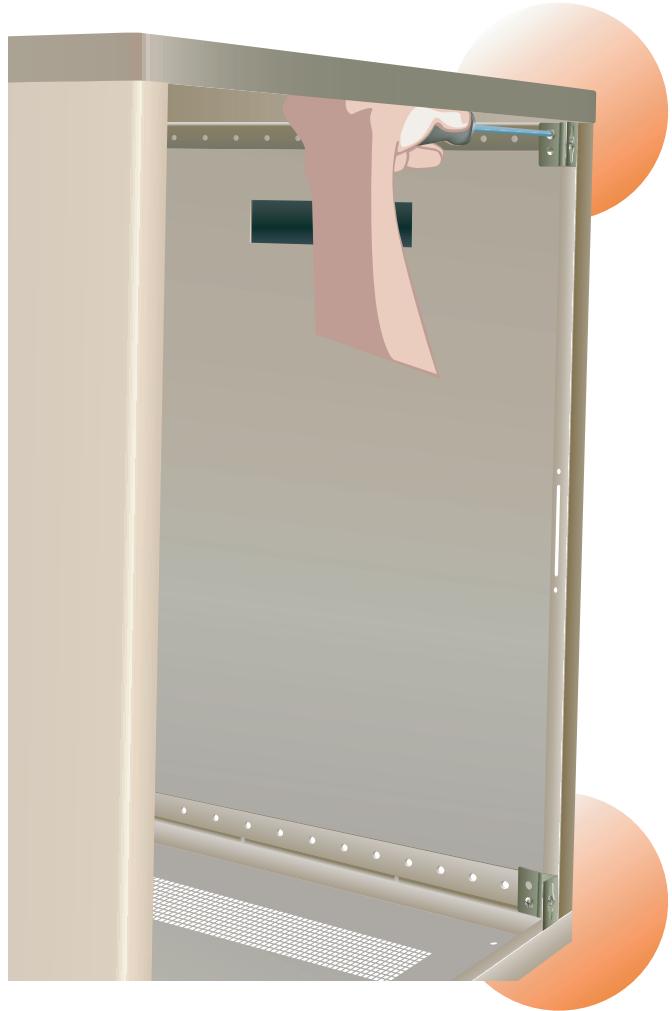

REAR GLAND PLATE

ATTACH GLAND PLATE TO REAR (IF REQUIRED)

